

## How to program your Keypad Lock

### General Code Rule

- A user code can not use the same first 4-digits of your programming code



**NOTE:** If you have forget or do not know your 6-digit programming code you will have to RESTORE your lock

### How do I add a new user code?

- 1.) Enter your current 6-digit programming code
- 2.) Press the  button
- 3.) Press 1 on your keypad
- 4.) Enter your new 4-digit user code
- 5.) Re-enter your new 4-digit user code to confirm it

### How do I delete an existing or preset user code?

- 1.) Enter your current 6-digit programming code
- 2.) Press the  button
- 3.) Press 2 on your keypad
- 4.) Enter your 4-digit user code you would like to delete
- 5.) Re-enter your 4-digit user code you would like to delete to confirm it

### How can I change my current or preset programming code?

- 1.) Enter your current 6-digit programming code
- 2.) Press the  button
- 3.) Press 3 on your keypad
- 4.) Enter your new 6-digit programming code
- 5.) Reenter you new 6-digit programming code to confirm it

### How do I temporarily disable all of the user codes on my lock?

- 1.) Enter you current 6-digit programming code
- 2.) Press the  button
- 3.) Press 4 on your keypad

#### **How do I enable all of the user codes on my lock?**

- 1.) Enter your current 6-digit programming code

#### **How do I turn the beeper off?**

**NOTE:** The lock will still beep when the battery is low

- 1.) Enter your current 6-digit programming code
- 2.) Press the  button
- 3.) Press 5 on your keypad

#### **How do I turn the beeper on?**

- 1.) Enter your current 6-digit programming code
- 2.) Press the  button
- 3.) Press 5 on your keypad

#### **How do I delete all the user codes at one time?**

**NOTE:** This will delete all of the user codes but not the 6-digit programming code

- 1.) Enter your current 6-digit programming code
- 2.) Press the  button
- 3.) Press 6 on your keypad
- 4.) Re-enter your current 6-digit programming code to confirm it